


SNAPPER®

POWERAKE® & POWERSLICE

MODEL NUMBERS:

**PR5001
PS5001**

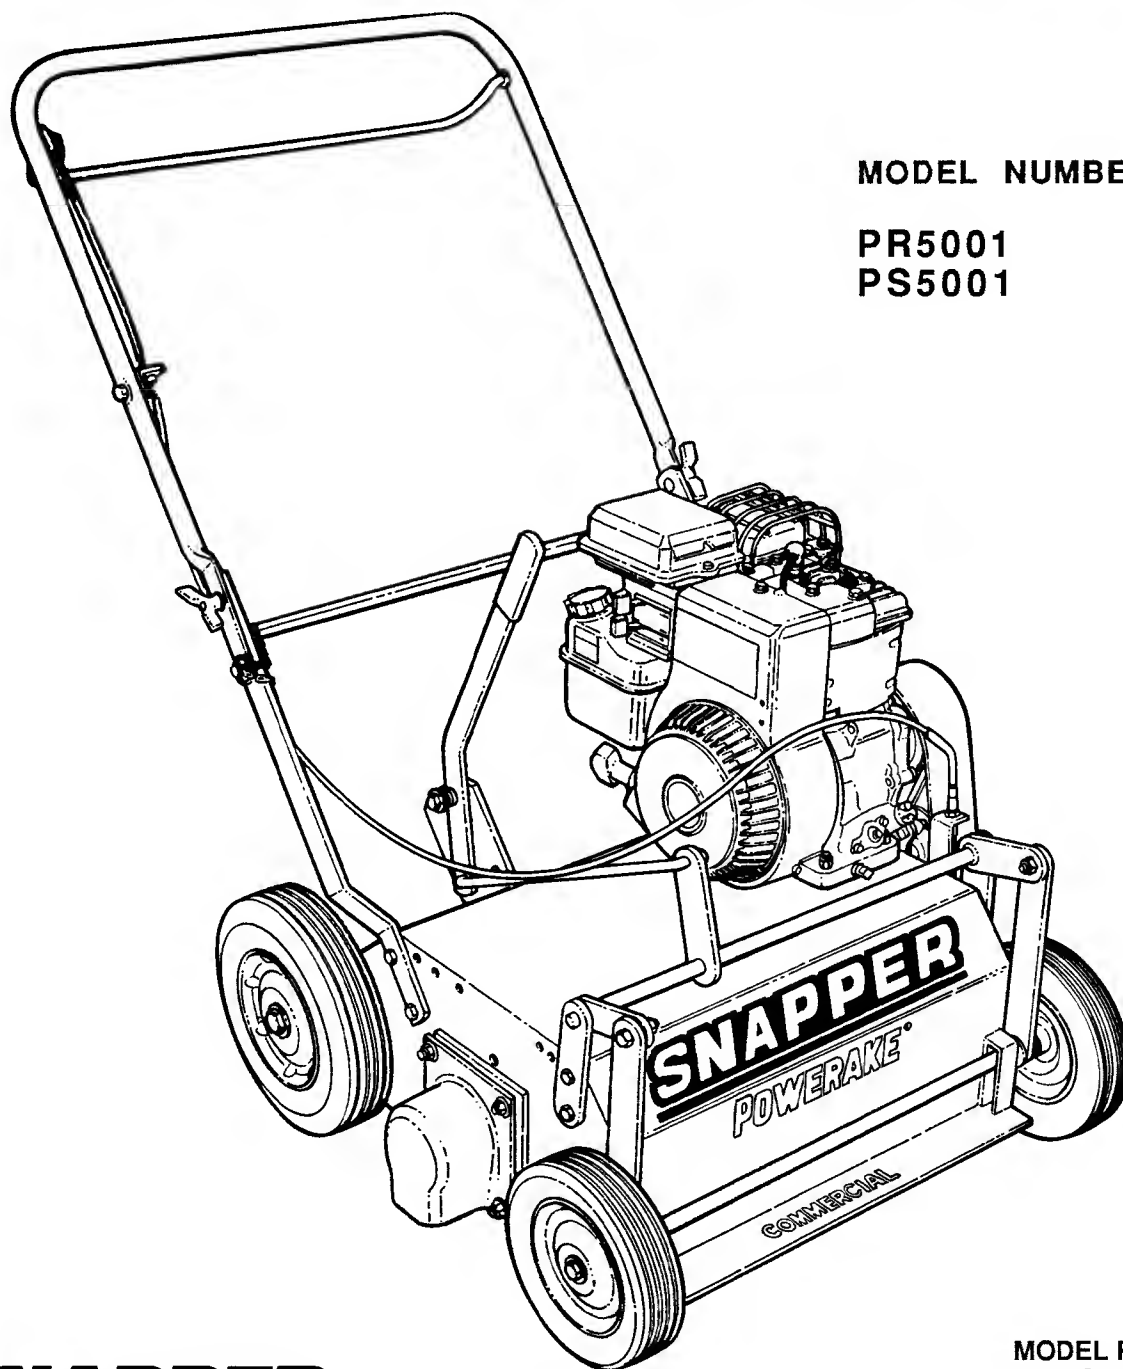

**MODEL PR5001
ILLUSTRATED**


SNAPPER® McDonough, GA., 30253 U.S.A.

COPYRIGHT © 1997
SNAPPER INC.
ALL RIGHTS RESERVED

(Rev. 1, 11/97) MANUAL No. 06420


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

HANDLE ASSEMBLY

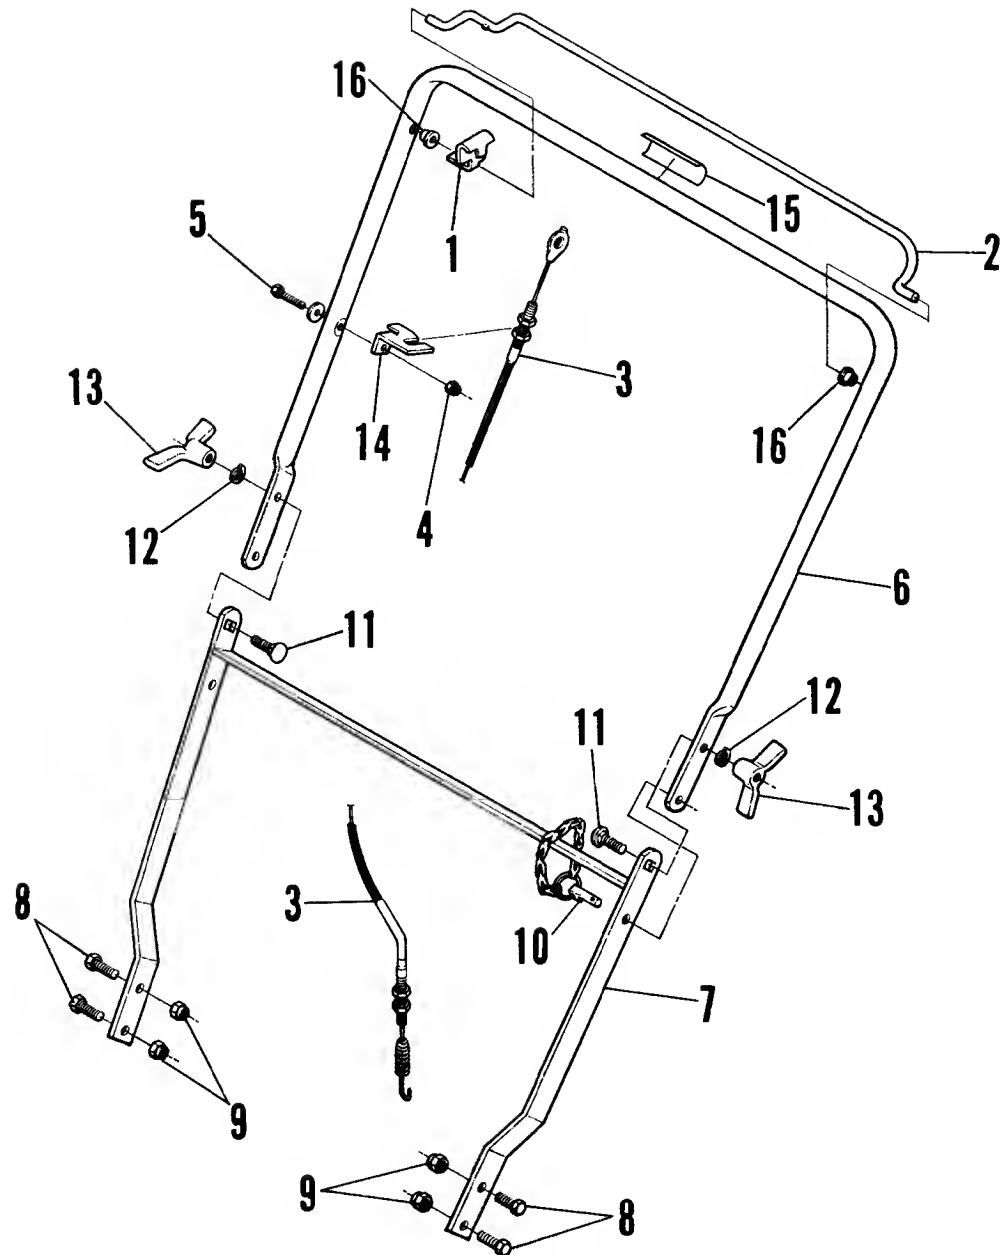

ITEM	PART NO.	DESCRIPTION
1	3-2593	CATCH, Bail
2	1-9212	BAIL
3	2-3704	CABLE, Clutch 66.5"
4	7-6978	NUT, 1/4-20 Hex Nyloc
5	9-0639	SCREW, 1/4-20 x 1-1/2" Hex Head Cap, Grade 5
6	3-8459	HANDLE, Upper
7	7-6051	HANDLE, Lower
8	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap, Grade 5 (4)
9	7-6979	NUT, 3/8-16 Hex Nyloc (4)
10	7-6994	PIN, Quick Release Hitch (2)
11	7-7003	BOLT, 5/16-18 x 1-1/4" Square Neck Carriage (2)
12	9-0187	WASHER, 5/16 Split Lock (2)
13	7-6132	KNOB (2)
14	3-2816	MOUNT, Cable
15	2-3705	DECAL
16	1-5601	BUSHING, 5/16" I.D. (2)


MAIN DECK ASSEMBLY

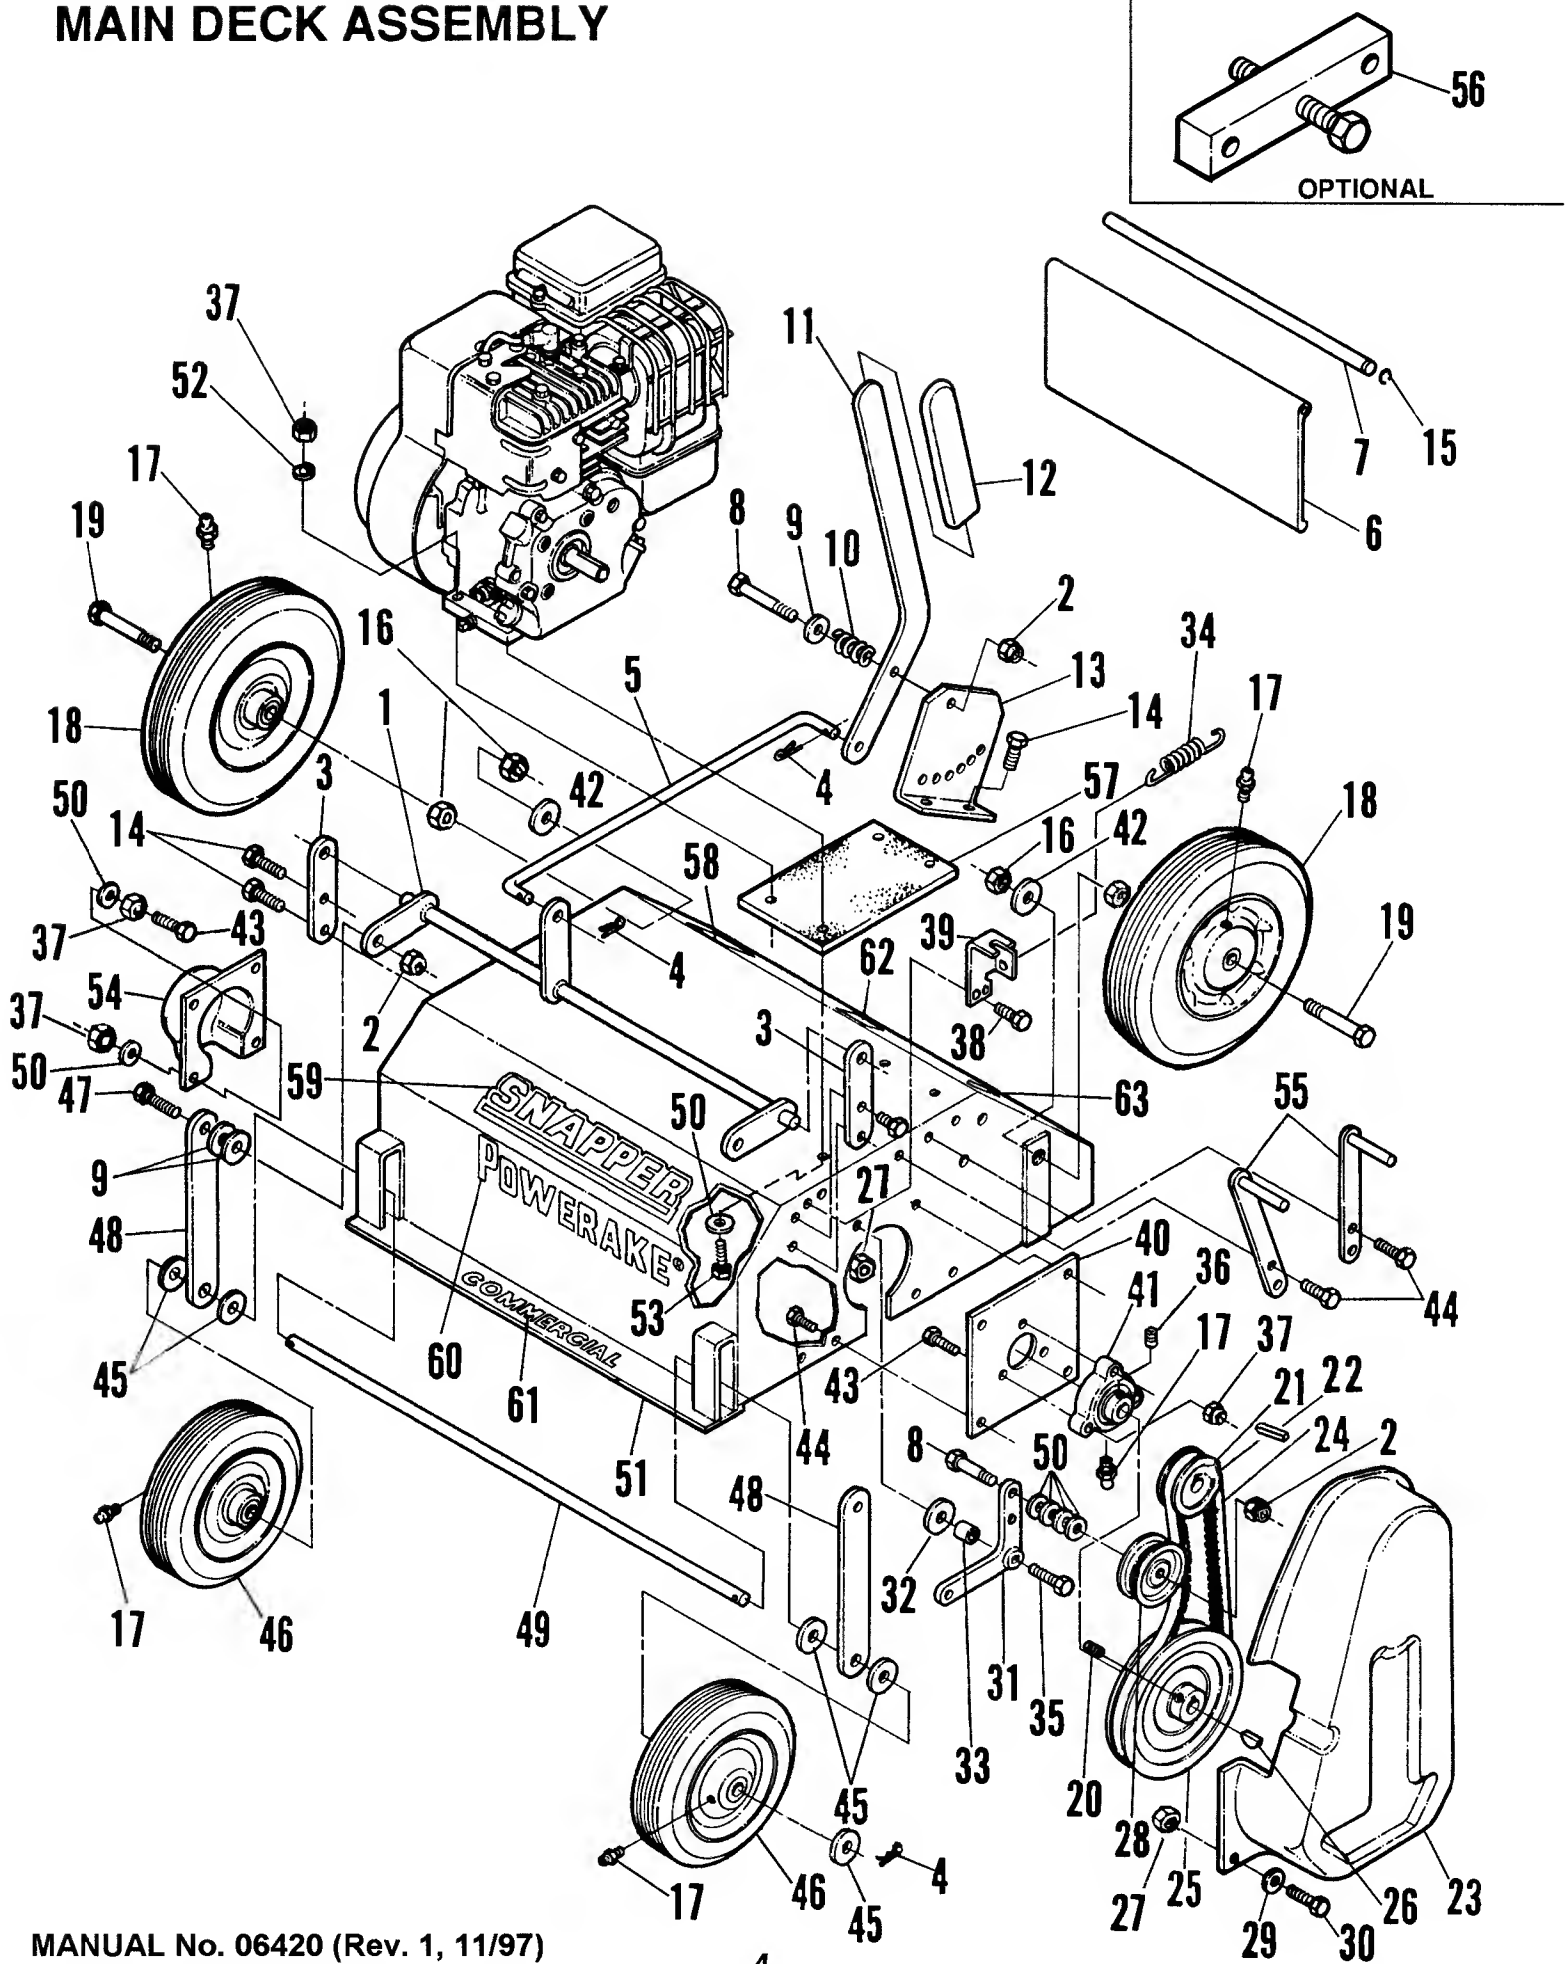

MAIN DECK ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	7-6052	ROD, Height Adjustment, Complete
2	7-6979	NUT, 3/8-16 Hex Nyloc (11)
3	7-6077	ARM, Pivot (2)
4	9-0365	PIN, 1/8 x 3/4" Cotter (4)
5	7-6075	ARM, Linkage
6	7-6055	DEFLECTOR
7	7-6076	ROD, Deflector
8	9-0588	SCREW, 3/8-16 x 2" Hex Head Cap, Grade 5 (2)
9	9-0517	WASHER, 3/8" Standard Flat (8)
10	7-6438	SPRING, Compression
11	7-7083	ADJUSTMENT LEVER w/Grip
12	7-6526	GRIP, Adjustment Lever
13	7-6121	GAUGE, Adjustment
14	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap, Grade 5 (6)
15	7-6961	RING, 5/16 External Retaining (2)
16	9-0278	NUT, 5/8-11 Hex Jam (4)
17	7-6998	FITTING, 1/4-28 Straight Grease (6)
18	7-6064	REAR WHEEL, 10" w/Grease Fitting. (7-6998) (2)
19	7-6931	SCREW, 5/8-11 x 4" Hex Head Cap, Grade 2 (2)
20	7-6956	SCREW, 5/16-18 x 3/8" Socket Head Set (3)
21	7-6087	PULLEY
22	7-6990	KEY, 3/16" Square x 1-3/4" Machine
23	7-6086	BELT GUARD
24	7-6085	BELT
25	7-6066	PULLEY, 7"
26	1-0211	KEY, #9/606 Woodruff
27	7-6978	NUT, 1/4-20 Hex Nyloc (5)
28	7-6500	PULLEY, Idler
29	9-0598	WASHER, 1/4" Standard Flat (3)
30	9-0071	SCREW, 1/4-20 x 1/2" Hex Head Cap, Grade 5 (3)
31	7-6088	BELL CRANK
32	7-6082	SPACER
33	7-6453	BUSHING, Powdered Metal
34	7-6564	SPRING
35	9-0655	SCREW, 3/8-16 x 1-1/2" Hex Head Cap, Grade 5
36	7-7679	SCREW, #10-32 x 1/4" Socket Head Set (4)
37	9-0717	NUT, 5/16-18 Hex Nyloc (24)
38	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap, Grade 5 (2)
39	3-2815	BRACKET, Cable
40	7-6059	END PLATE (2)
41	7-6072	FLANGE BEARING w/Set Screws (7-7679) (2)
42	9-0333	WASHER, 5/8" Split Lock (2)
43	7-6948	TAPBOLT, 5/16-18 x 1-1/4" Hex Head (10)
44	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 2 (6)
45	9-0550	WASHER, 1/2" Flat (6)
46	7-6063	FRONT WHEEL, 8" w/Grease Fitting. (7-6998) (2)
47	7-6927	SCREW, 3/8-16 x 1-1/4" Hex Head Cap, Grade 2 (2)
48	7-6060	LIFT ARM (2)
49	7-6058	FRONT AXLE
50	9-0692	WASHER, 5/16" Standard Flat (16)
51	7-7037	BODY w/DECALS, Powerake
--	7-7185	BODY w/DECALS, Powerslice
52	9-0187	WASHER, 5/16" Split Lock (4)
53	9-0669	SCREW, 5/16-18 x 1-3/4" Hex Head Cap, Grade 5 (4)
54	7-6071	GUARD, Shaft
55	7-6105	GUIDE, Belt (2)
56	7-7046	PULLEY PULLER (Optional)
57	7-6070	ENGINE PAD
58	7-7950	DECAL
59	1-9249	DECAL, Snapper
60	7-6128	DECAL, Powerake
--	7-6326	DECAL, Powerslice
61	7-6682	DECAL, Commercial

RAKING SHAFT ASSEMBLY

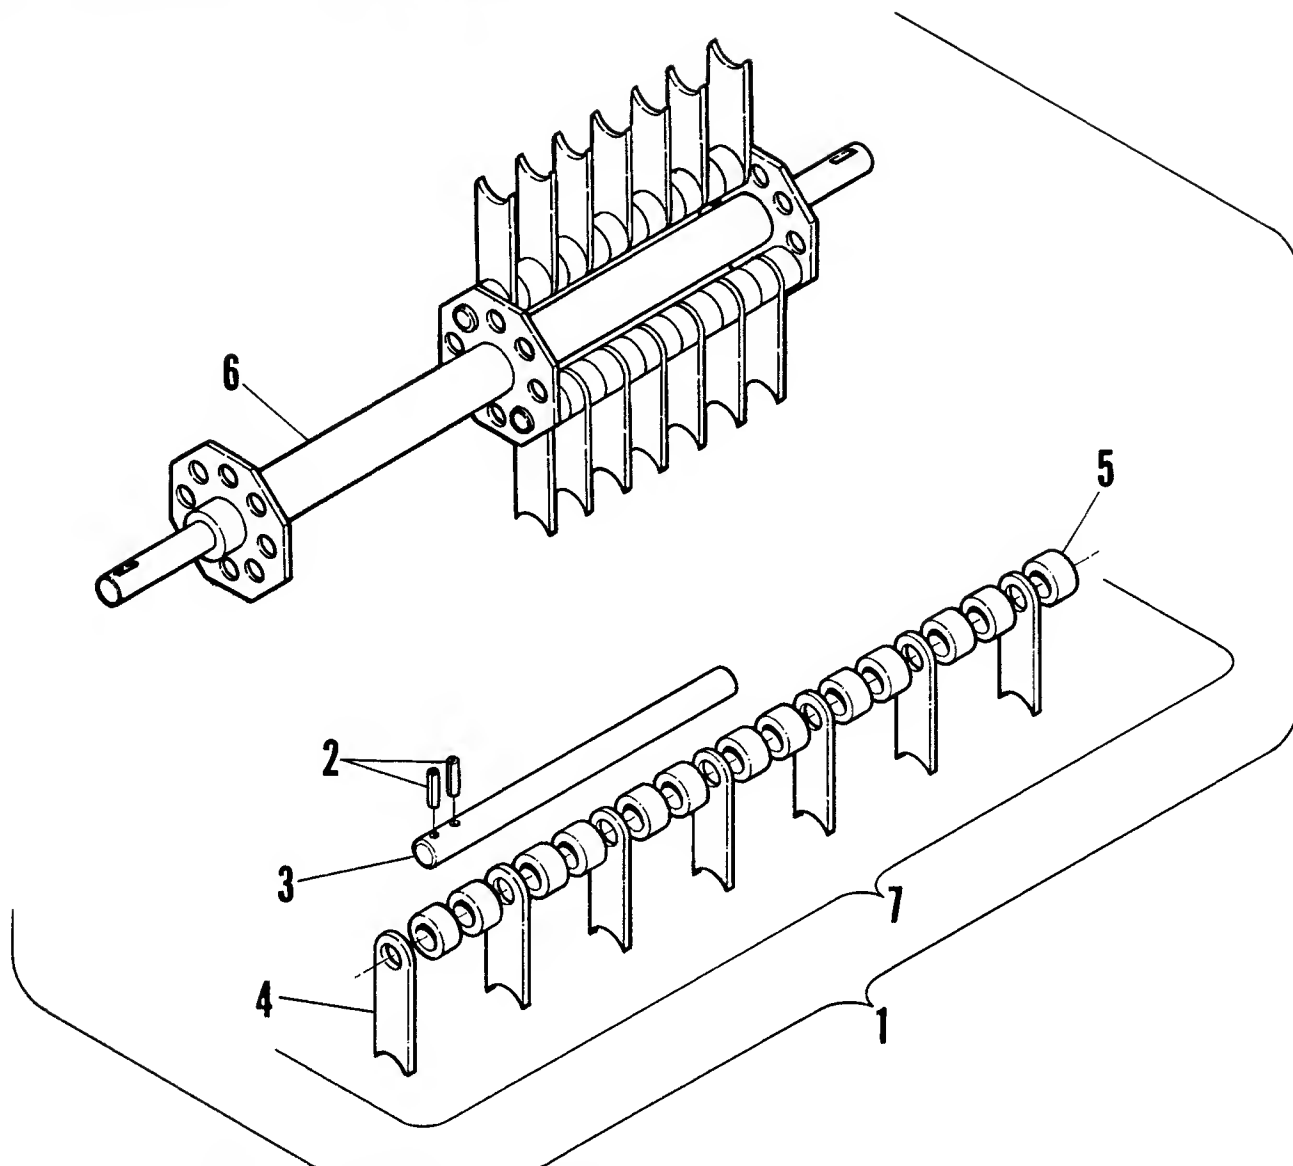


ITEM	PART NO.	DESCRIPTION
1	6-0812	RAKING SHAFT, Complete
2	7-6986	PIN, 1/8 x 7/8" Roll (8)
3	7-6061	SATELLITE SHAFT (4) (See "C" Below for Satellite Shaft Replacement Kit)
4	7-6074	FINGER (28) (See "A" Below for Finger Replacement Kit)
5	7-6062	SPACER (52) (See "B" Below for Spacer Replacement Kit)
6	7-6050	SHAFT ASSEMBLY
7	7-7031	MAIN SHAFT REPLACEMENT KIT (Contains Parts for 4 Satellite Shafts Complete)

OPTIONAL KITS

A	7-7032	FINGER REPLACEMENT KIT (Contains 28 Fingers; 7-6074)
B	7-7033	SPACER REPLACEMENT KIT (Contains 52 Spacers; 7-6062)
C	7-7034	SATELLITE SHAFT REPLACEMENT KIT (Contains 4 Shafts; 7-6061 and 8 Roll Pins; 7-6986)

SLICER ASSEMBLY

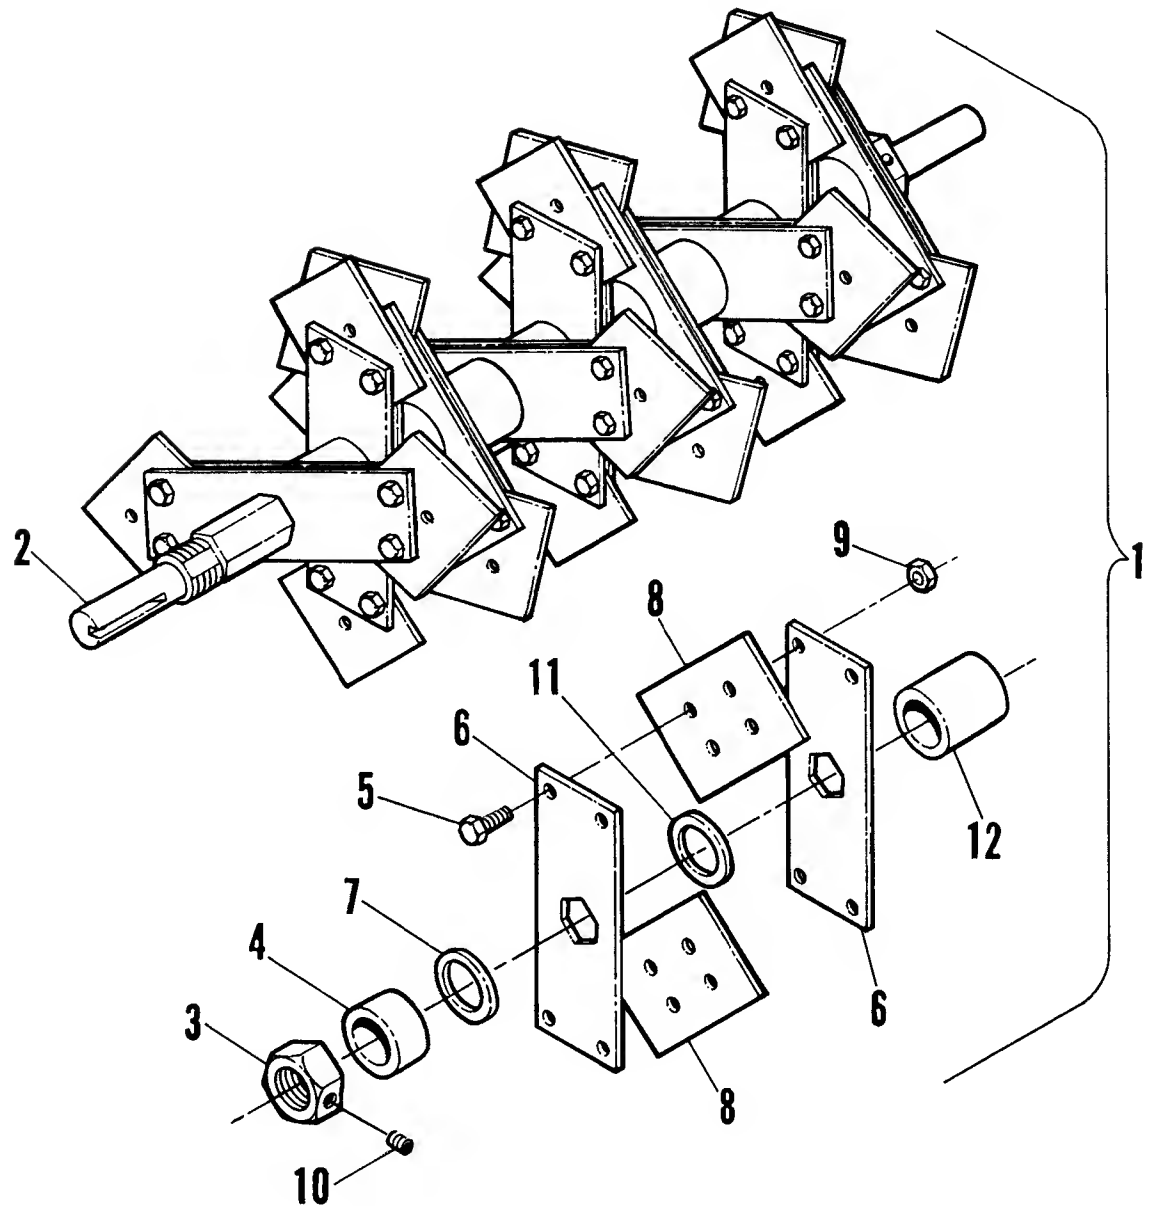

ITEM	PART NO.	DESCRIPTION
--	6-0815	SLICER QUICK CHANGE KIT
1	6-0814	SLICER ASSEMBLY, Complete
2	7-6322	BARE "SLICER" REEL SHAFT
3	7-6323	NUT, 1" SAE Jam w/Set Screw (2)
4	7-6324	SPACER, Sleeve (2)
5	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap, Grade 5 (40)
6	7-6325	HOLDER PLATE (20)
7	7-6329	WASHER, Flat (2)
8	7-7186	SLICER BLADE (20) (See "D" Below for Slicer Blade Replacement Kit)
9	7-6978	NUT, 1/4-20 Hex Nyloc (40)
10	7-6956	SCREW, 5/16-18 x 3/8" Socket Head Set (2)
11	7-6327	BLADE SPACER-WASHER (10)
12	7-6328	SLEEVE SPACER (9)

OPTIONAL KIT

D	7-7183	SLICER BLADE REPLACEMENT KIT (Contains 20 Blades; 7-7186)
---	--------	--

Parts Manual for


SNAPPER®

POWERAKE & POWERSLICE

MODEL NUMBERS:

PR5001

PS5001

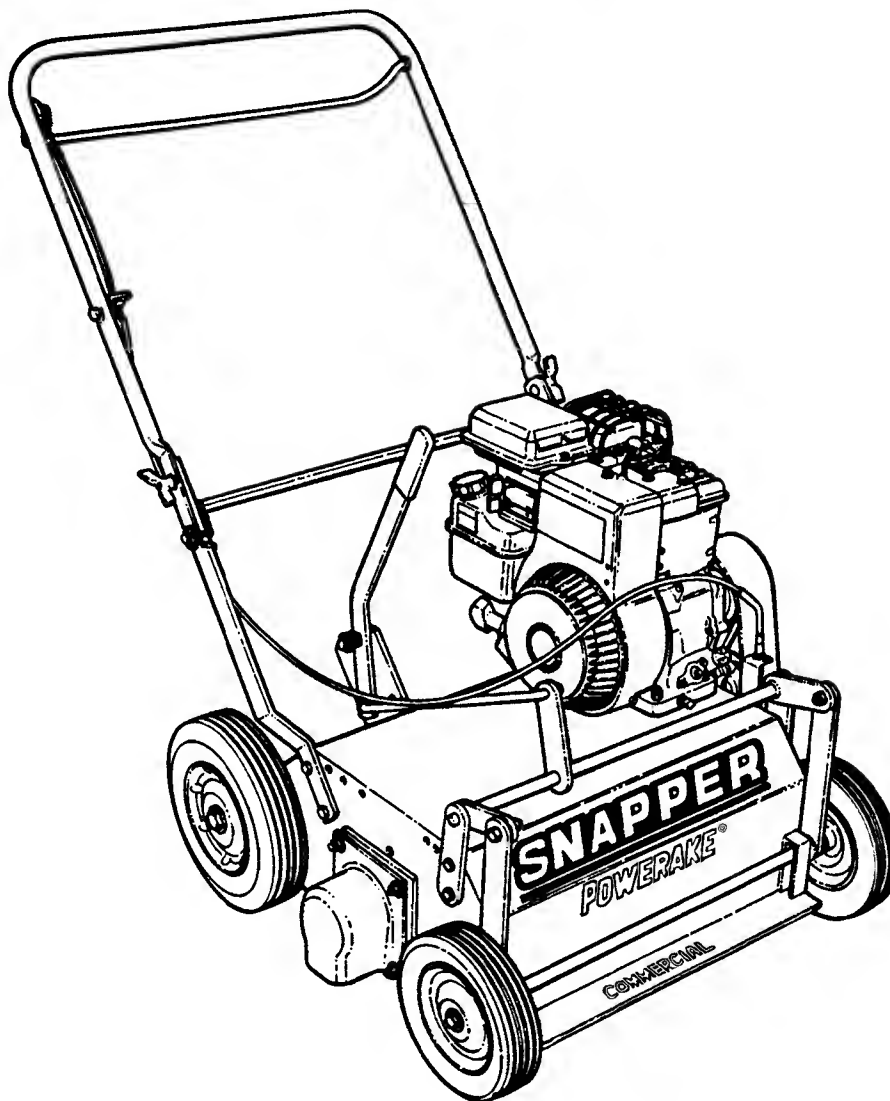

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.